


XTERN® FOOT DROP? | GET YOUR LIFE BACK!

EXTENSION STOPPER KIT PLANTAR & DORSIFLEXION MODULATION SYSTEM

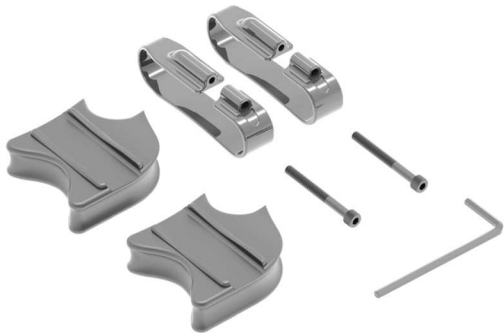

	XTERN AFO SIZE	500202-EXT-030 EXTENSION STOPPER HEIGHT 30mm	500202-EXT-040 EXTENSION STOPPER HEIGHT 40mm	500202-EXT-045 EXTENSION STOPPER HEIGHT 45mm
   	LARGE			
	MEDIUM			
	SMALL			

SIZE SELECTION CHART

	XTERN AFO SIZE	500202-EXT-030 EXTENSION STOPPER HEIGHT 30mm	500202-EXT-040 EXTENSION STOPPER HEIGHT 40mm	500202-EXT-045 EXTENSION STOPPER HEIGHT 45mm
OLDER GENERATION  (2024 & Earlier)	LARGE		 *	
	MEDIUM		 *	
	SMALL			

* ULTRA-STIFFNESS



CLINICAL INDICATIONS

FOOT DROP COMBINED WITH :

- Spasticity
- Knee Hyperextension
- Calf Atrophy
- Foot Slap
- Extra Heavy Foot or Footwear

2024-10-18

EXTENSION STOPPER KIT

HEIGHT 30mm

KIT BLOC D EXTENSION
HAUTEUR 30mm

TurboMed™
ORTHOTICS







500202-EXT-030



COMPATIBLE :

XTERN ORIGINAL CLASSIC (OLDER GENERATION)

>> (SEE SIZE SELECTION CHART) <<

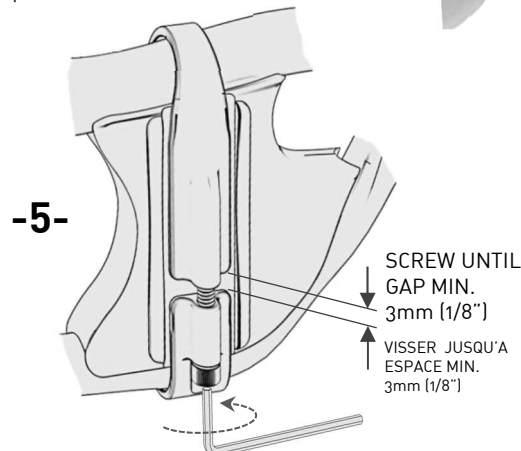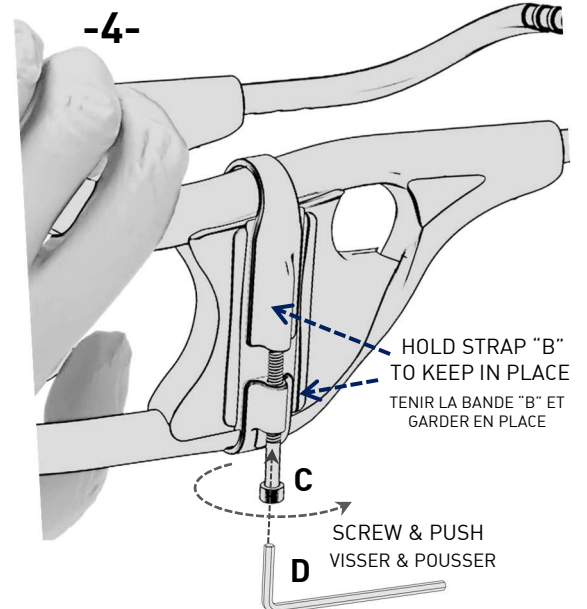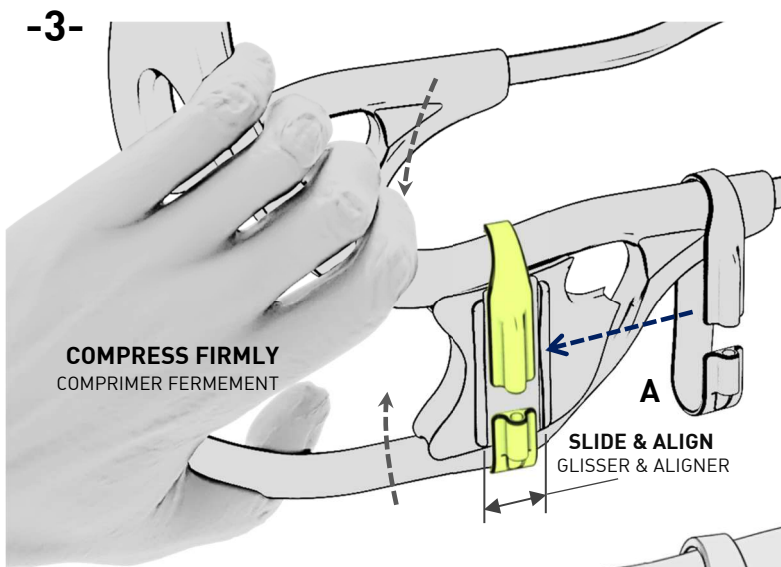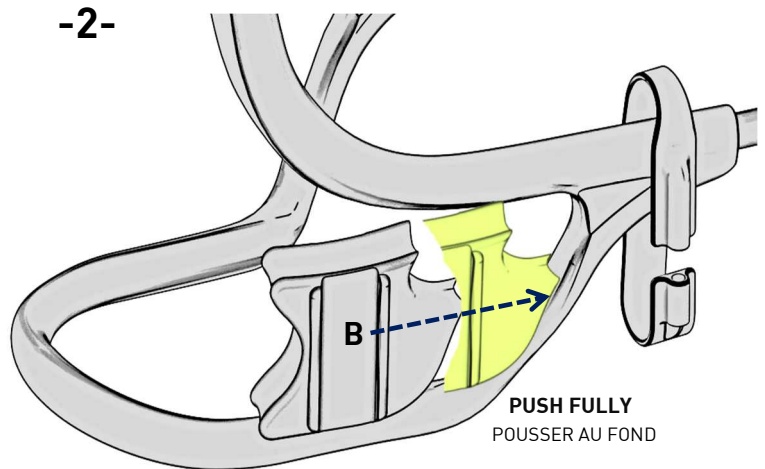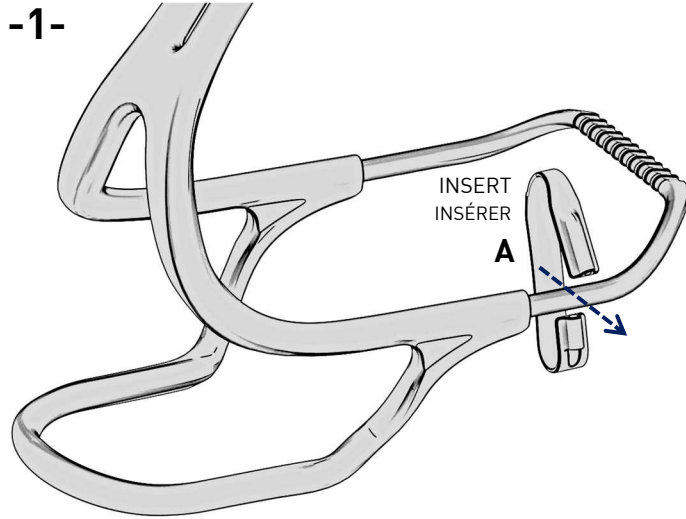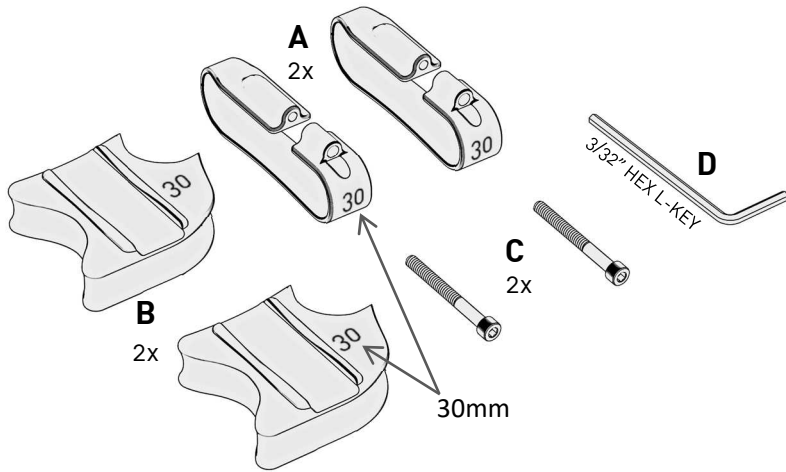

-6- REPEAT ALL STEPS FOR
INSTALLATION ON
OPPOSITE SIDE
RÉPÉTER TOUTES LES ÉTAPES
POUR INSTALLATION
DU CÔTÉ OPPOSÉ

2024-10-18

EXTENSION STOPPER KIT

HEIGHT 40mm

KIT BLOC D EXTENSION
HAUTEUR 40mm

TurboMed™
ORTHOTICS

500202-EXT-040




COMPATIBLE :


XTERN SUMMIT, CLASSIC+, FRONTIER

XTERN ORIGINAL CLASSIC (OLDER GENERATION)


>> (SEE SIZE SELECTION CHART)<<

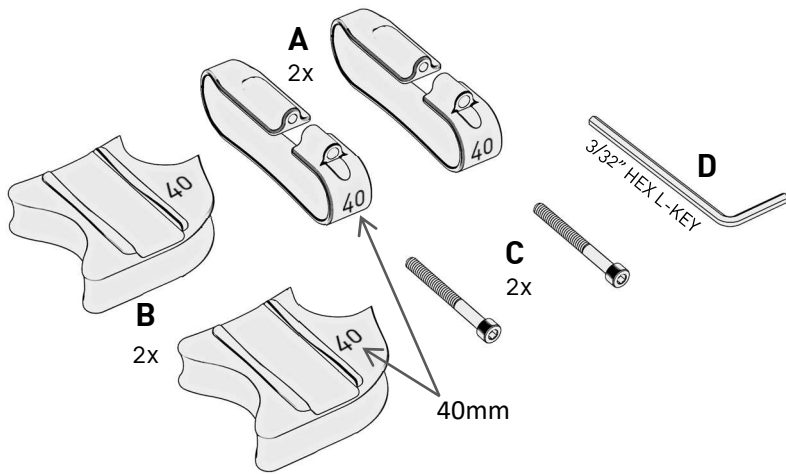


-1-

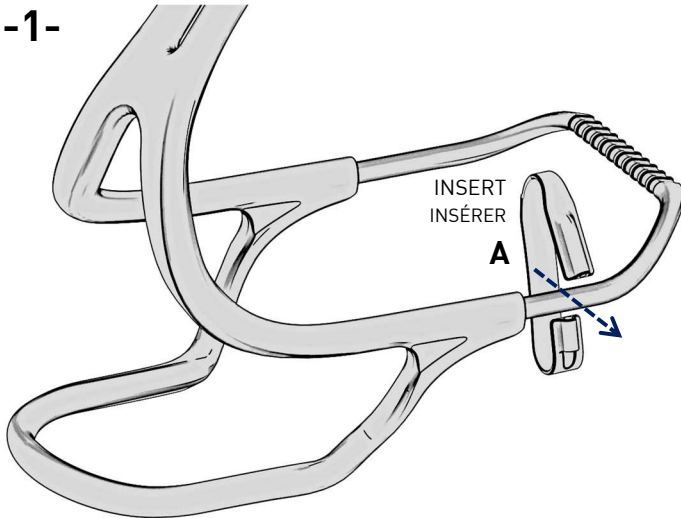


-2-

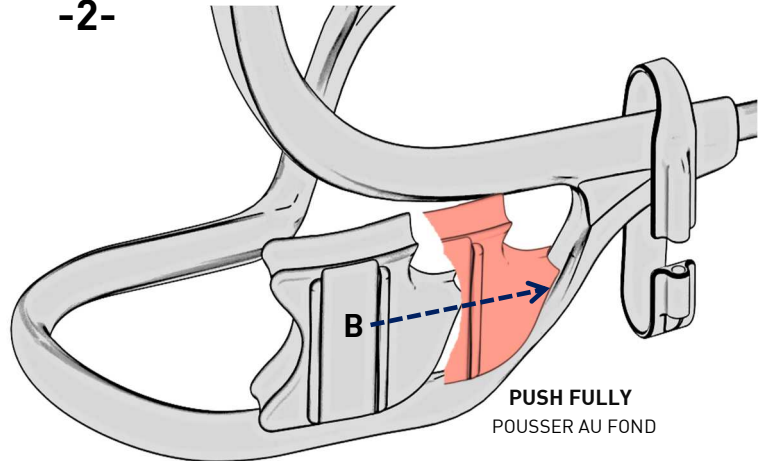


-3-

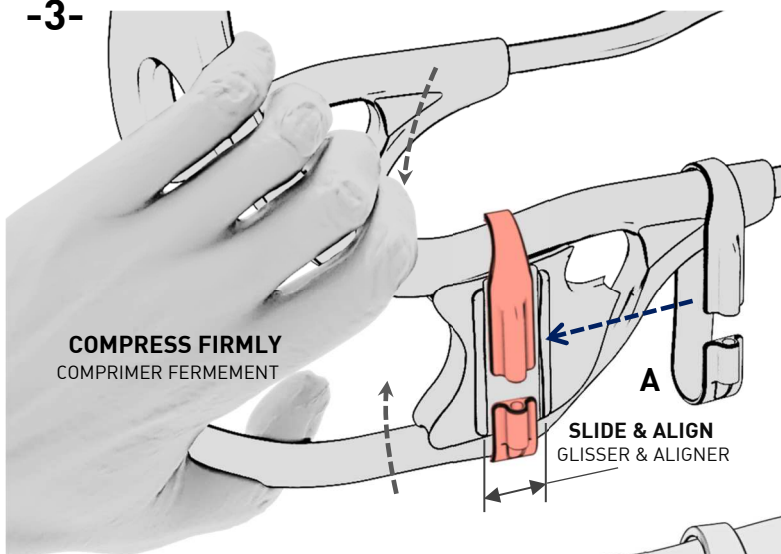

-4-

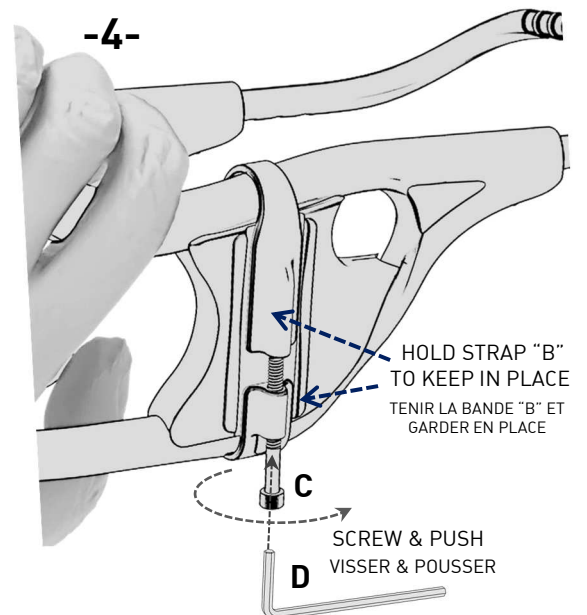

-5-

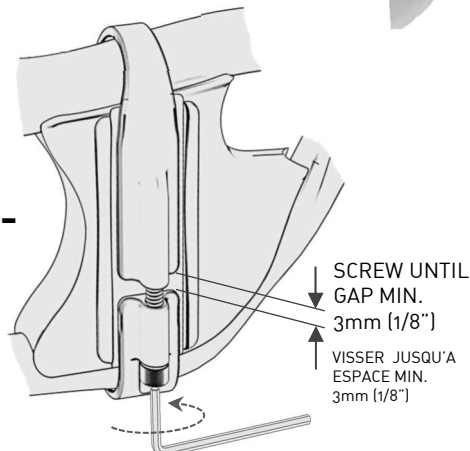

-6-

REPEAT ALL STEPS FOR
INSTALLATION ON
OPPOSITE SIDE

RÉPÉTER TOUTES LES ÉTAPES
POUR INSTALLATION
DU CÔTÉ OPPOSÉ

2024-10-18

EXTENSION STOPPER KIT

HEIGHT 45mm

KIT BLOC D EXTENSION
HAUTEUR 45mm

TurboMed™
ORTHOTICS


500202-EXT-045




COMPATIBLE :

XTERN SUMMIT, CLASSIC+, FRONTIER


>> (SEE SIZE SELECTION CHART) <<

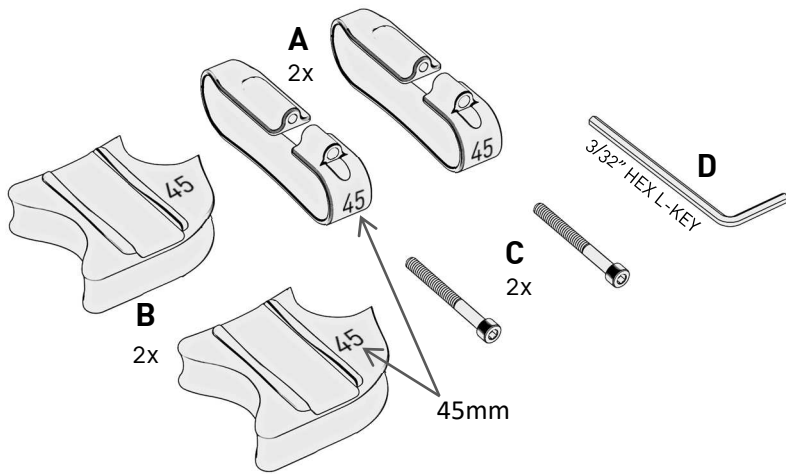


-1-

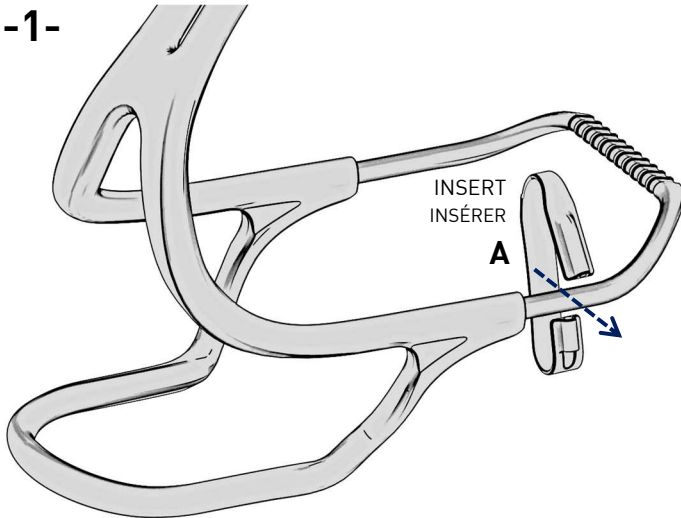


-2-

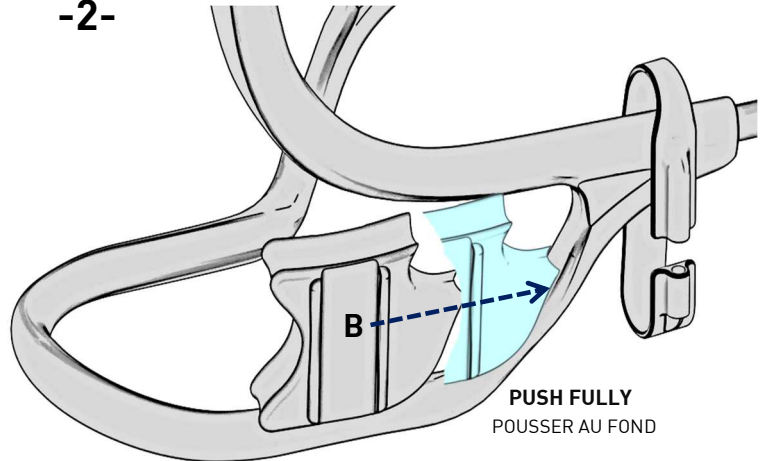


-3-

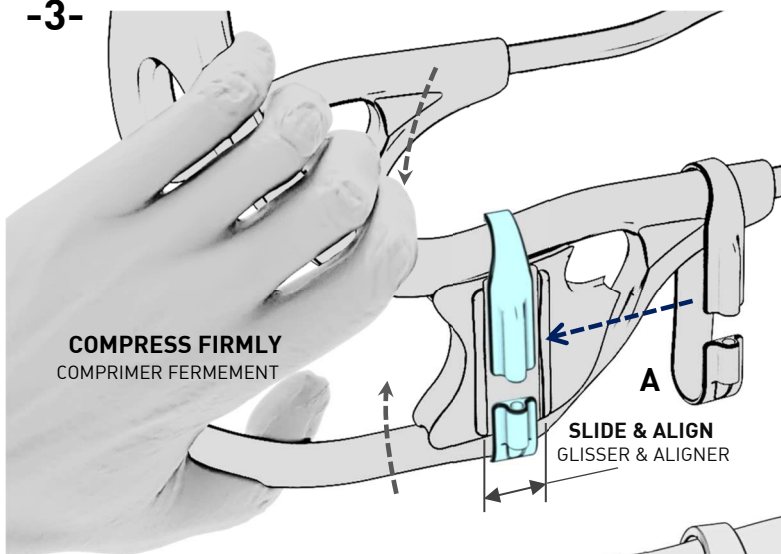

-4-

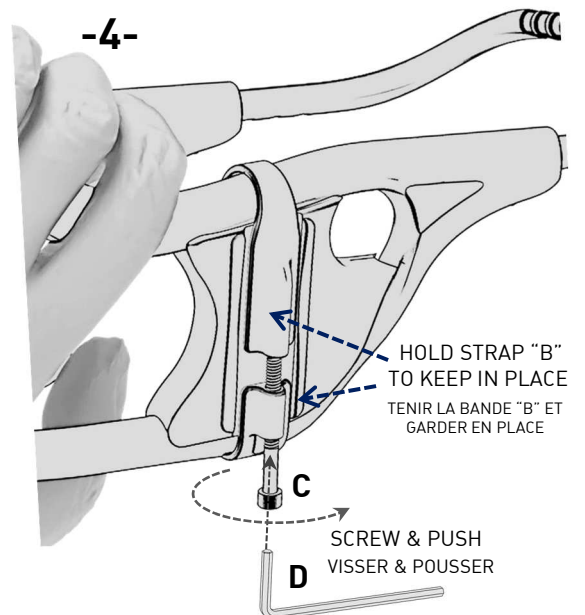

-5-

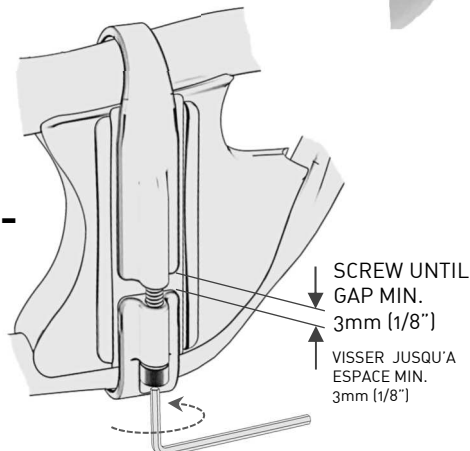

-6-

REPEAT ALL STEPS FOR
INSTALLATION ON
OPPOSITE SIDE

RÉPÉTER TOUTES LES ÉTAPES
POUR INSTALLATION
DU CÔTÉ OPPOSÉ